


## SCHEMA TECNICA

### WHR 62 – QUICK CONFIGURATION GUIDE

**AT THE FIRST OPERATION IT IS RECOMMENDED TO READ THE COMPLETE INSTRUCTION MANUAL TO PREVENT ANY DAMAGE TO THE PRODUCT**


Set the units through dip switch following the instructions below, in case of single unit, set as a MASTER.

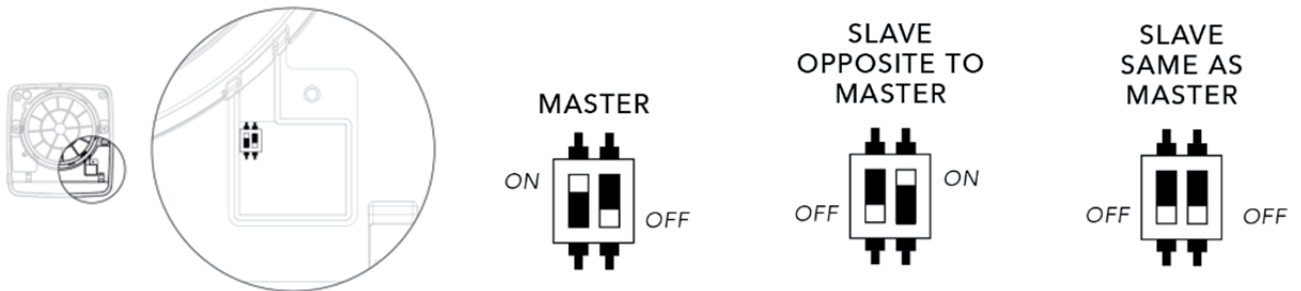


Unit 1	Unit 2	Unit 3	Unit 4	Unit 5
MASTER	SLAVE OPPOSITE TO MASTER	SLAVE SAME AS MASTER	SLAVE OPPOSITE TO MASTER	ETC...

### WHR 62 – QUICK CONNECTIONS

Single unit connection:

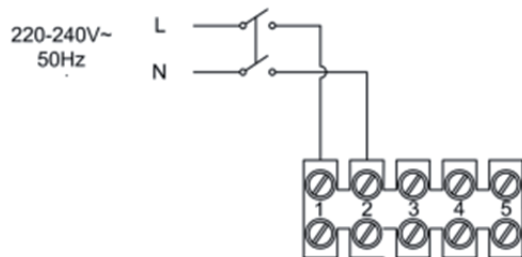

MASTER-SLAVE system connection:

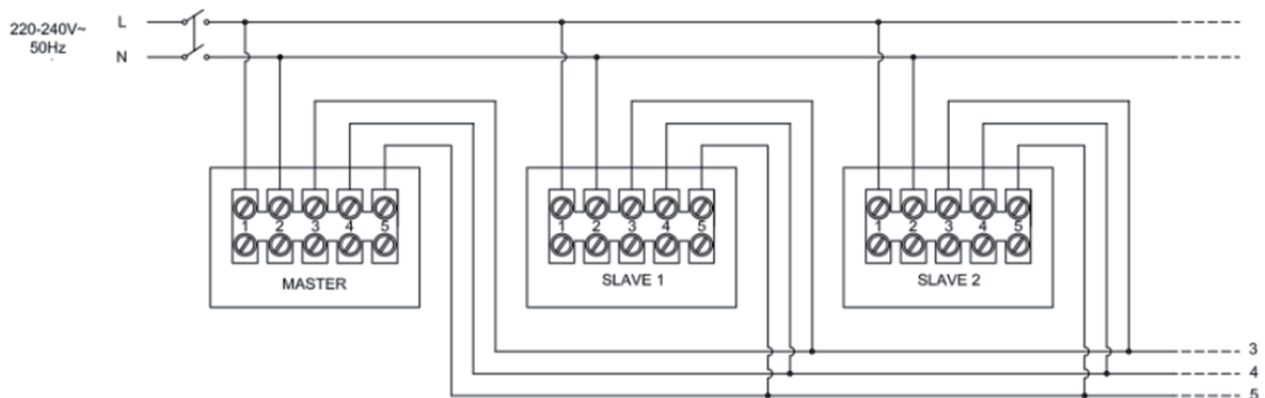

## WHR 62 – QUICK INSTRUCTIONS FOR USE

**AT THE FIRST OPERATION IT IS RECOMMENDED TO READ THE COMPLETE INSTRUCTION MANUAL TO PREVENT ANY DAMAGE TO THE PRODUCT**

Mode \ Features	Button for selection	Screen display	Humidity sensor	Twilight sensor	Shutter	Standard operation	Operation in alarm
AUTOMATIC			Activated	Activated	Open	Heat recovery	Extraction
SURVEILLANCE			Activated	Activated	Closed	Standby	Extraction
MANUAL			Not activated	Not activated	Open	Heat recovery	Not activated
NIGHT			Not activated	Not activated	Open	Heat recovery	Not activated
TIMED EXTRACTION			Not activated	Not activated	Open	Extraction	Not activated
MASTER SLAVE AIR FLOW			Not activated	Not activated	Open	Air flow	Not activated
SLAVE MASTER AIR FLOW			Not activated	Not activated	Open	Air flow	Not activated
EXTRACTION			Not activated	Not activated	Open	Extraction	Not activated
INTAKE			Not activated	Not activated	Open	Intake	Not activated

Cod. P08057000